

New Zealand

# Crib



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

# Crib vehicle **MANUAL**

## Contents

Description of Keys.....	3
Vehicle Equipment .....	4
Starting the Vehicle.....	5
Blinds .....	6
12-volt electrical system .....	7
Freshwater tank.....	8
Greywater .....	9
Portable Gas Stove.....	10
Tap & Sink .....	12
Fridge.....	13
USB Chargers.....	14
Inside Table.....	15
Bed .....	16
Daytime Setup .....	17
Storage.....	18
Fuel.....	19
Jack & Spare Tyre .....	20
Additional Information.....	21
Dash warning lights .....	22

Try our online help hub.



Helphub.starrv.com helphub.jucy.com

# Crib vehicle **MANUAL**

## Description of Keys

### **IGNITION KEY:**

Use the indicated ignition key to:

- Start your vehicle.



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

# Crib vehicle **MANUAL**

## Vehicle Equipment



### **FIRE EXTINGUISHER**

Each vehicle is equipped with a dry chemical fire extinguisher, meticulously selected to address both type B fires (involving grease and liquids) and type C fires (involving electrical elements). To deploy the extinguisher effectively, grasp the ring situated atop the bottle, direct the nozzle towards the top of the flames, and press down the level firmly. Guide the nozzle from side to side to cover the entire width of the base of the flames.

\* A fire extinguisher is attached to the interior of the vehicle.

Try our online help hub.



Helphub.starrv.com helphub.jucy.com

# Crib vehicle MANUAL

## Starting the Vehicle



Gearstick must be in PARK and your foot on the pedal for the vehicle to start.

The dashboard will display a 'P' indicating the vehicle is in Park.

Start the vehicle using the ignition key.



With your foot still on the brake pedal, pull the gear stick down into the 'D' position. The dashboard will display a 'D' indicating the vehicle is in drive.



**Please Note:** Handbrake is located next to the brake pedal. Press with your foot to engage and disengage. When the brake is engaged, you will hear a continuous beeping noise.

Try our online help hub.



Helphub.starrv.com helphub.jucy.com

# Crib vehicle **MANUAL**

## Blinds

The vehicle is equipped with privacy curtains on the rear window, side windows and between the front and back cab.

These blinds can be rolled up when not in use.



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

# Crib vehicle **MANUAL**

## 12-volt electrical system

This vehicle has two batteries:

One in the engine compartment battery which is located under the bonnet and the other is in the rear of the cabin and is also known as your 'domestic battery'.

The domestic battery operates the cooler box and rear interior light. The domestic battery is charged by the alternator when the vehicle is being drive.



Please note: It is recommended that the vehicle is driven for 4-6 hours a day for the domestic battery to continue to operate the 12-volt system.

Try our online help hub.



Helphub.starrv.com helphub.jucy.com

# Crib vehicle MANUAL

## Freshwater tank

The freshwater tank can be found in the rear of the vehicle, in the kitchen area.

To fill the freshwater tank:

1. Flip up the compartment that says, 'fresh water only'. It's located next to the gas cooker at the rear of the vehicle.
2. Place the end of the water hose into the tank and connect the hose to the tap. Turn on the tap to fill the vehicle with fresh water.

**Please note:** Do not use too much pressure as the tank must be vented when filling. In the event of an air bubble, simply remove the hose, reinsert it and fill slowly again. The tank is full when the water starts to overflow from the water inlet.

Try our online help hub.



[Helphub.starrv.com](http://Helphub.starrv.com) [helphub.jucy.com](http://helphub.jucy.com)

# Crib vehicle **MANUAL**

## Greywater

Any water that goes down your sink will come out of the left side of the rear undercarriage of the vehicle.



## Portable Gas Stove

The vehicle is equipped with a portable butane gas stove, which can be found in the kitchen compartment, in a black carry case. Inside the vehicle, the cooker is to be used only on the kitchen stove, or it can be used outside on a side table.

The cooker is designed to be used for short periods – no longer than 15 minutes at a time.

The cooker is not designed for use with pans larger than 200mm.

### To use the portable stove:



1. Remove gas cooker from the black carry case and place on a flat surface



2. Turn the ignition knob to 'OFF' and set the cartridge lock lever to 'UNLOAD'




3. Open the cartridge cover, slide the gas cartridge into the compartment- top end first with its notch up.
4. Align cartridge collar notch with the locator tab on the gas cooker, as per the photo.



# Crib vehicle MANUAL



5. Push and turn the knob anticlockwise, past the  position, until a click is heard.

**Please note:** If the burner fails to light, **immediately** turn the ignition knob to 'OFF' position and start again.

6. The flame can be controlled by turning the ignition knob between the 'HIGH' and 'LOW' positions.

## To turn off the portable gas stove

1. Turn the ignition knob to 'OFF' to shut off fuel supply.
2. Wait until the flame is fully extinguished before performing the next step.
3. Raise the cartridge lever to 'UNLOAD' and remove the gas cartridge from the compartment.

**DO NOT** leave the gas bottle inside the gas cooker when not in use.



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

# Crib vehicle **MANUAL**

## Tap & Sink

This vehicle comes equipped with a water system.

### To use the tap:

1. Push and pump the handle so the water comes out of the faucet.



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

# Crib vehicle **MANUAL**

## Fridge

The fridge in your vehicle operates via the 12-volt system. To operate the fridge, ensure that it is plugged in and the green light on the side of the fridge is illuminated.

Please note: it is recommended that the vehicle is driven for 4-6 hours a day for the domestic battery to continue to operate the 12-volt system.



Try our online help hub.



Helpub.starrv.com helpub.jucy.com

# Crib vehicle **MANUAL**

## USB Chargers

The vehicle is equipped with 4 USB power points on the side of the bed. These run off the 12-volt battery.



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

# Crib vehicle **MANUAL**

## Inside Table

Inside the JUCY crib, you can find the table components. They are usually stored under the bed. The components include a tabletop and a table leg.



1. Take out the tabletop and table leg from the storage and insert the leg into the round area between the seats. Ensure the leg is stable and locked into place.
2. Once the leg is secured, attach the tabletop to the leg. The table is now ready to use.

To disassemble the table:

1. Reverse the set-up process – remove the tabletop, then the leg.
2. Store them back in their designated storage under the bed.



## Bed

The vehicle is equipped with 1 double bed that also serves as the dining area and back seats.

### Nighttime set up – front seats:

1. Bring forward both front seats with the back rest pulled forward



2. Unclip the elastic and pull the bed frame towards the back seat.



3. Fold down the front squab



4. Move the front seats back against the bed for additional support.



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

# Crib vehicle **MANUAL**

## Daytime Setup

### **DINING SETUP**

The pole and tabletop are located under the bed. Place the pole into the hole on the floor then place the tabletop onto the pole.



### **DRIVING SETUP**



Try our online help hub.



[Helphub.starrv.com](http://Helphub.starrv.com) [helphub.jucy.com](http://helphub.jucy.com)

# Crib vehicle **MANUAL**

## Storage

The vehicle has a dedicated storage area under the bed to store personal items.

Try our online help hub.



Helpub.starrv.com helpub.jucy.com

# Crib vehicle MANUAL

## Fuel

The vehicle accepts unleaded fuel only. **DO NOT** refill the vehicle with any other fuel or fluid. The fuel tank cap is marked with "Fill me up with 91" on it and can be opened by unscrewing the cap. The fuel cap is located on the passenger side of the vehicle.

Once filled with unleaded fuel, place the fuel cap back on the inlet and turn the cap to lock it.

**Please Note:** The vehicle accepts unleaded fuel only. If you fill the vehicle with diesel, water or AdBlue please do not start the engine. Call JUCY roadside assistance immediately.



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

# Crib vehicle **MANUAL**

## Jack & Spare Tyre

The vehicle jack is located inside the kitchen. On the left side, it is stored behind a plastic cover.



The spare tyre is located underneath the rear of the vehicle.

Ensure the jack is placed under the recommended jacking point to access the spare tyre.

Note: Check the tyre pressure and ensure it is properly inflated before continuing driving.



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

# Crib vehicle MANUAL

## Additional Information








Tyre size	215/60R 16
Tyre pressure	45 PSI
Oil type	10W40
Coolant type	Red Coolant (any brand)

Note: **Do not mix coolant colours.** If the coolant in the vehicle is red, use red. If green, use green



# Crib vehicle MANUAL

## Dash warning lights






Warning Light Symbol	Warning Light	Description	What to Do if the Light Comes On
	Brake Warning (Red)	Handbrake engaged or low brake fluid. If with ABS light, brake fault.	Pull over safely & avoid sudden braking. If the light comes on with ABS light, stop immediately & contact Roadside Assistance.
	ABS Warning (Amber)	ABS fault – brakes work without ABS. If with brake light, possible brake failure.	If on alone, drive cautiously & check as soon as possible. If with brake light, stop immediately & call Roadside Assistance.
	Electronic Stability Control (Amber)	Traction control fault; flashing = active, constant = fault.	Drive with caution. Restart engine; if still on, contact Roadside Assistance.
	Electronic Brakeforce (Amber/Red)	The braking system has malfunctioned	You can still drive very cautiously & contact Roadside Assistance.
	Airbag/SRS (Red)	Fault in airbag or seatbelt system.	Contact Roadside Assistance.
	Coolant Overheat (Red)	Engine overheating – possible low coolant or leak.	Stop immediately & contact Roadside Assistance.
	Battery Charge (Amber/Red)	Battery not charging.	Contact Roadside Assistance.

Try our online help hub.



Helphub.starrv.com helphub.jucy.com

# Crib vehicle MANUAL

	Oil Pressure (Red)	Low oil pressure or high oil temp.	Stop immediately & contact Roadside Assistance.
	Engine Management (Amber)	Fault with engine or emissions.	Continue to destination & then contact Roadside Assistance.
	Oil Change (Red)	Engine is due for a service and oil change.	Continue to destination & then contact us to schedule a mechanical visit.
	Fuel Filter Warning (Amber)	Fuel filter is due for a service or there may be water in the filter.	Continue to destination & then contact Roadside Assistance.
	Exhaust Temperature (Amber)	Exhaust and catalytic converter temperature is too high.	Stop immediately & contact Roadside Assistance.