

Australia

# Compass



# Vehicle manual.



helphub.starrv.com



helphub.jucy.com

# Compass vehicle **MANUAL**

## Contents

---

<b>Description of keys.....</b>	<b>03</b>
<b>Vehicle equipment.....</b>	<b>04</b>
<b>Starting the vehicle.....</b>	<b>05</b>
<b>Blinds .....</b>	<b>06</b>
<b>12-volt electrical system .....</b>	<b>07</b>
<b>Lights.....</b>	<b>08</b>
<b>Fresh water tank .....</b>	<b>09</b>
<b>Tap and sink .....</b>	<b>10</b>
<b>Grey water .....</b>	<b>11</b>
<b>Portable gas stove .....</b>	<b>12</b>
<b>Fridge .....</b>	<b>15</b>
<b>Folding the rear chair down .....</b>	<b>16</b>
<b>Interior table .....</b>	<b>18</b>
<b>Portable toilet cassette .....</b>	<b>19</b>
<b>Bed .....</b>	<b>20</b>
<b>Rooftop tent .....</b>	<b>24</b>
<b>Diesel .....</b>	<b>26</b>



 
helphub.starrv.com



helphub.jucy.com

# 01. Description of keys

---

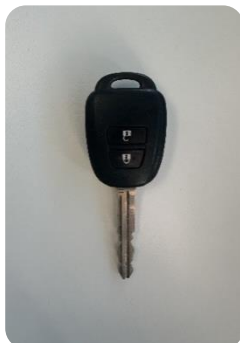

## **IGNITION KEY:**

Use for:

1. Start your vehicle



## 02. Vehicle equipment

---

### FIRE EXTINGUISHER



Each vehicle is equipped with a dry chemical fire extinguisher, selected to address both type B fires (involving grease and liquids) and type C fires (involving electrical elements). To deploy the extinguisher effectively, grasp the ring situated atop the bottle, direct the nozzle towards the top of the flames, and press down the lever firmly. Guide the nozzle from side to side to cover the entire width of the base of the flames.

\*The fire extinguisher is located on the passenger side behind the table/bed frame.

**SAFETY:** Do not attempt to put out a fire if you are in any danger. If you are unable to control the fire, stay away from the vehicle in case of explosion.



 
helphub.starrv.com



helphub.jucy.com

## 03. Starting the vehicle

Gear stick must be in PARK and your foot on the pedal in order for the vehicle to start.

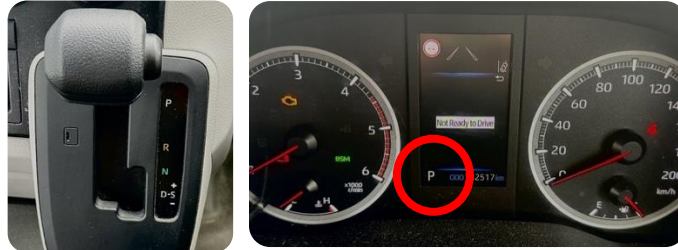

*Gear stick in parking mode*

The dashboard will display a 'P' indicating that the vehicle is in park. Start the vehicle using the ignition key.



*Gear stick in driving mode*

With your foot still on the brake pedal, pull the gear stick down into the 'D' position. The dashboard will display a 'D' indicating that the vehicle is in drive.

### NOTE –

Handbrake is located next to the driver's seat. Press the button and push down to disengage. Press button again and pull upwards to engage.



*Handbrake engaged*



*Handbrake disengaged*



helphub.starrv.com



 
helphub.jucy.com

## 04. Blinds

---



The vehicle is equipped with privacy curtains for the rear window, side windows and between the front cab and the back cab.

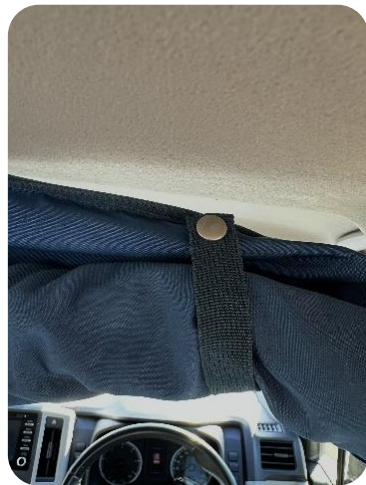

The blind dividing the front and back cab can be rolled up when not in use. For the side and rear windows, the blinds attach magnetically and can be stored in the driver's side storage unit under the table when not needed.



Side and rear blinds folded and stored in storage unit



helphub.starrv.com



helphub.jucy.com

## 05.12-volt electrical system

 
---

Your vehicle has two batteries. One in the engine compartment and one in the rear of the cabin. The battery inside the cabin is also called your domestic battery. The engine compartment battery is located under the bonnet.

The domestic battery operates the water pump, fridge & rear interior light. The domestic battery is charged by the alternator when the vehicle is being driven.

You can see the voltage of the 12-volt battery using the voltage reader on the rear passenger side of the dining area. There is also an outlet for 2 USB connections.

**IMPORTANT** – It is recommended that the vehicle is driven for 4-6 hours a day for the domestic battery to continue to operate the 12-volt system.

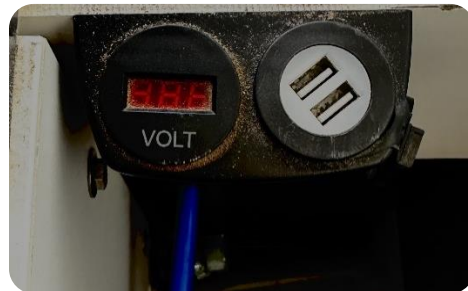

There is a vent on the back of the kitchen cassette designed to keep the domestic battery cool. When your bed is set up at night, this vent will be visible in the storage compartment underneath. To prevent overheating, please avoid storing anything against the vent at night.



helphub.starrv.com



helphub.jucy.com

## 06. Lights

 
---

There is a light located next to your sink in the kitchen area.



To turn on, push in the clear casing surrounding the bulb. To turn off, press the casing again.



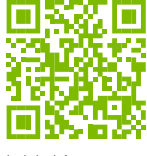

## 07. Fresh water tank

 
---

The freshwater tank is situated on the passenger side of the kitchen cassette. The hose for filling the tank is stored in the compartment next to the kitchen cassette.

### To fill the freshwater tank:



1. **Open the Tank:** Turn the black plug counterclockwise to remove it.

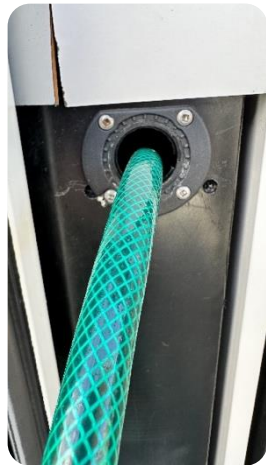

2. **Attach the Hose:** Insert one end of the water hose into the tank and connect the other end to an external tap. Begin filling the tank with fresh water.

3. **Close the Tank:** Once filled, reinsert the black plug into the tank and turn it clockwise to tighten. Ensure the plug is securely in place to prevent leaks but avoid over-tightening to prevent it from getting stuck.

**Important tips:** Do not use too much pressure as the tank must be vented when filling. In the event of an air bubble, simply remove the hose, reinsert it and fill slowly again. The tank is full when the water starts to overflow from the water inlet.



helphub.starrv.com




helphub.jucy.com

## 08. Tap and sink

 
---

To access the fresh water, use the sink located in the kitchen cassette. To turn the tap on, hold down the right-hand switch until you have used the desired amount of water.

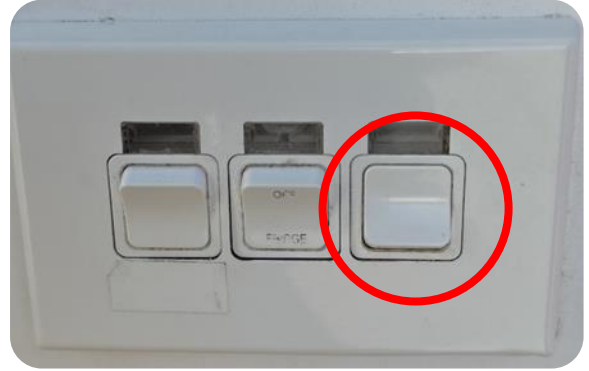



helphub.starrv.com

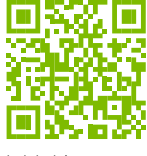 

helphub.jucy.com

## 09. Grey water

---



Water that goes down your sink will collect in the grey water tank, located on the driver's side of the kitchen cassette.

### To empty:

1. **Locate the Hose:** The brown drain hose for grey water is stored in a bag in the compartment on the side of the kitchen cassette.
2. **Prepare for Draining:** Remove the lid and attach the hose to the protruding drain valve.
3. **Position the Hose:** Place the outlet of the drain hose over a suitable disposal point.
4. **Drain the Tank:** Pull the T handle attached to the outlet valve upwards to start draining.
5. When the water flow stops, shut the valve, remove the hose, rinse it, and store it back in the bag.



helphub.starrv.com



helphub.jucy.com

## 10. Portable gas stove

 
The vehicle is equipped with a portable butane gas stove which can be found in the kitchen compartments in a black carry case.

Inside the vehicle, the cooker is to be only used on the kitchen stove but can be used outside on a side table.

The cooker is designed to be used for very short periods – no longer than fifteen minutes at a time.

This cooker is not designed for use with pans larger than 200mm.

1. To start remove gas cooker from the black carry case and place on a flat surface.

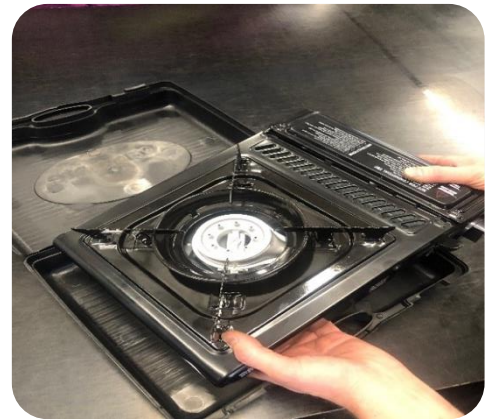

2. Open cartridge cover and place gas cartridge in.



3. Turn the ignition knob to "OFF" and set the cartridge lock lever to "UNLOAD".





helphub.starrv.com




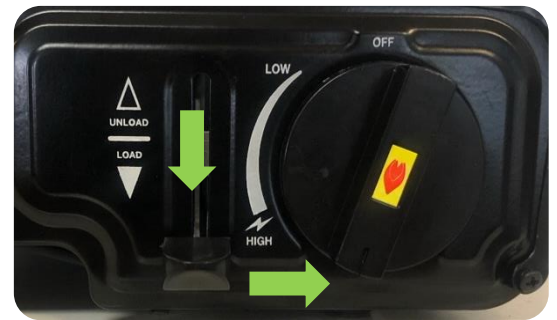 
helphub.jucy.com

4. Open the cartridge cover, slide the gas cartridge, top end first and with its notch up, in the compartment.

5. Align cartridge collar notch with the locator tab on the gas cooker as per photo.

 


6. Push and turn the knob to anti-clockwise past the  position until a click is heard.



**Please Note:** If the burner fails to light, immediately turn the ignition knob to "OFF" position and restart again.

The flame can be controlled by turning the ignition knob between the "HIGH" and "LOW" position.

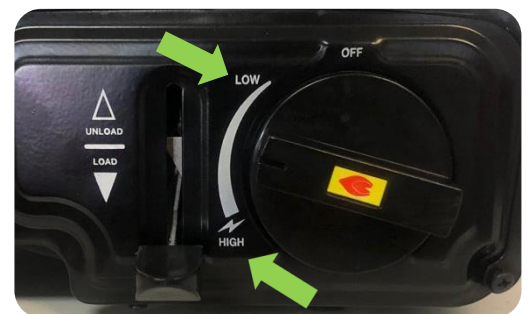

Try our online **help hub**.



helphub.starrv.com



helphub.jucy.com

Turn the ignition knob to "OFF" to shut off fuel supply.

Wait until the flame is fully extinguished before performing the next step.

Raise the cartridge lever to "UNLOAD" and remove the gas cartridge from the compartment.

Do not leave the gas bottle inside the gas cooker when not in use.





helphub.starrv.com



helphub.jucy.com

# 11. Fridge

The refrigerator in your vehicle runs on the 12-volt system.



To activate, flip the middle switch on the switch panel.

Make sure the silver dial labelled "vent" is pushed to the right while the fridge is in use to ensure the door closes properly. Push the dial to the left, exposing the word "vent," only when the fridge is not in use and does not need cooling, allowing it to air out.



**IMPORTANT** – It is recommended that the vehicle is driven for 4-6 hours a day for the domestic battery to continue to operate the 12-volt system.



helphub.starrv.com



helphub.jucy.com

# 12. Folding the rear chair down

---

The rear chair must be folded down before making the bed. You may need to move the driver's seat slightly forward for this chair to fold into place.

**Step 1:** Rear chair must be folded down first before you make the bed. You need 2 people to fold down the chair



**Step 2:** Push in the red lever located on the rear of the chair



**Step 3:** Rear chair is now bent down in half. Push the grey lever on the left side of the chair up and lift the bottom of the chair up as far as it will go



Try our online **help hub**.



helphub.starrv.com



helphub.jucy.com

**Step 4:** Once you have completed steps 1,2, and 3, the rear chair should look like this as per photo on the right.



Try our online **help hub**.



helphub.starrv.com

 


helphub.jucy.com

## 13. Inside table

---

The interior table setup includes two benches that double as storage units, and a collapsible table. At night, the table can be converted into a bed. To convert the table into a bed, follow step 15 in instructions.

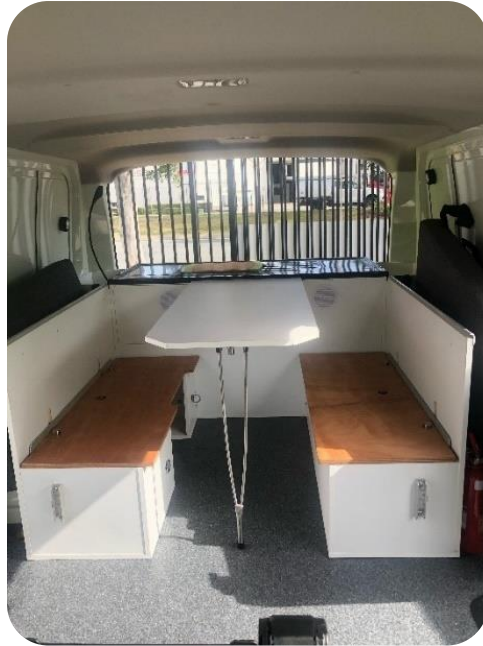



helphub.starrv.com



helphub.jucy.com

## 14. Toilet cassette

---



The toilet cassette is stored under the driver's side dining seat and is held in by an elastic cord.

**Important tips:** The toilet must be accessible at night when the bed is made up. There is space in front of the side seats to position the toilet at night

1. Before use, ensure the top tank of the toilet has fresh water. To fill, open the top tank cap and fill. When completed, open the flush valve by pulling the handle marked "PULL" and then push the bellows on top of the toilet to flush. When flushing is complete, slide the flush valve close.
2. When the lower holding tank is full, separate the upper and lower tanks held together by the 2 metal side clips. Open the large cap on the tank and drain the contents into a suitable disposal point and reassemble. Include a waste breakdown chemical into the lower tank.



helphub.starrv.com



helphub.jucy.com

## 15. Bed

The vehicle features a double bed that doubles as the dining area. You'll find your linens stored beneath the dining seat on the driver's side.

To set up the bed, the rear chair must be folded down, which requires two people. Follow the previously provided instructions for this process.

Additionally, remember to remove the toilet cassette, located under the dining seat on the driver's side, for easy access at night.



**1:** To make the bed, remove the seat squabs off the seat base and remove the bed extension.



**2:** Remove the loose plywood from the left & right-hand side.



**3:** Once the seat squabs & loose plywood have been removed. Open the hinged seat base to the vertical position against the tabletop.



helphub.starrv.com



helphub.jucy.com



**4:** Once you have completed steps 1,2&3 lift the middle table up and tuck the left & right seat base underneath the middle table, press down on middle table to see if it is secured.



**5:** Place the left & right-hand loose plywood with the cut-outs, can now be placed between the seat back alloy strip and on top of the vertical section matching the corresponding cut-outs to hold the panel in place.



**6:** Make sure the plywood has been placed in correctly & is flat & secured. Put weight on the left & right-hand side of each plywood so its firm.



**7:** Bed base should now be secured and filled with the bed squabs. Ensure the sink is covered and wiped down before placing bed squabs on.



**8:** Bed extension table place on a flat surface to open table legs. Please note bed extension is ONLY for inside use not to be used as an outdoor table.



**9:** Lift right side leg up until you hear the table leg click and is secure.

Try our online **help hub**.



helphub.starrv.com



helphub.jucy.com



 
**10:** Lift left side leg up until you hear the table click and is secure.



**11:** Once both table legs have been clicked in and secure, flip the table over on to its legs.




**12:** Bed extension table is now ready to be connect to the bed.

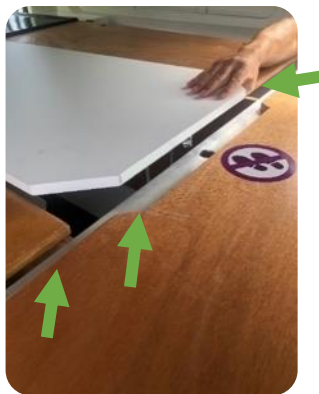

**13:** Slide extension bed in with the metal side with the hole facing the middle table, lift the middle table up and tuck the metal part of the extension bed under.



 **14:** Slide the bottom legs to connect into the aluminium channel. Pull the steel clip to connect to the steel hook.

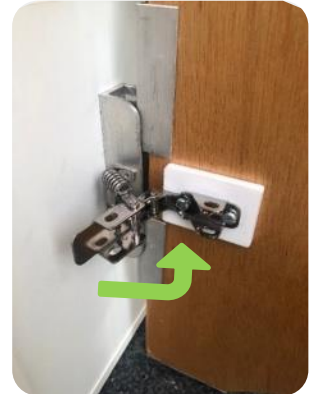

**15:** Push steel tab to lock the lower left & right extension leg in.



**16:** Lower left & right leg should now be fully locked in as per photo.



**17:** Put weight on the bed extension to make sure it is fully secured.



**18:** Bed base is ready for bed squabs to be placed on top.

Try our online **help hub.**



helphub.starrv.com



helphub.jucy.com



**19:** Large Rear bed base to be placed on the kitchen bench.



**20:** Rear bed base squab placed firmly on the kitchen bench & now place the rest of the bed squabs on to the bed.



**21:** Place the remaining bed squabs on to the bed, ensure the squab with no Velcro tabs is placed in the middle



**22:** Place the middle bed squab on top of the middle table with the 4 Velcro tabs place flat and firm.



**23:** Extension bed smaller squab to be placed on the extension table and firmly secured to the left & right hand squabs.



**24:** Once all bed squabs are firmly placed and secured, bed is now ready.



helphub.starrv.com



helphub.jucy.com

# 16. Rooftop tent

## UP

1. Using the ladder stored under the rear chair, extend and lock into place.



2. Undo all latches around vehicle using extension ladder and step ladder.



3. Push passenger side up.



4. Push driver side up.



Try our online **help hub**.



helphub.starrv.com



helphub.jucy.com

## **DOWN**

1. Pull the strap on the driver's side down.



2. Secure the driver side latches.
3. Pull the passenger side down.
4. Secure the passenger side latches.
5. Secure the rear and front latches.



helphub.starrv.com



helphub.jucy.com

## 17. Diesel

---

The vehicle accepts DIESEL only. DO NOT refill the vehicle with any other fuel or fluid. The fuel tank cap is marked with “Fill me up with Diesel” and can be opened from the driver’s seat. The fuel filling location is located on the passenger side of the vehicle.

Once filled with diesel, place the fuel cap on the inlet and turn the cap to lock it.



**IMPORTANT:** The vehicle accepts DIESEL only. If you fill the vehicle with diesel, water or AdBlue, please do not start the engine and call JUCY Roadside Assistance immediately.