

New Zealand – Self Contained

Condo Gen 3



Try our online help hub.



Helpub.starrv.com helpub.jucy.com

Condo – Gen 3 vehicle **MANUAL**

Contents

Description of Keys.....	3
Fire Extinguisher.....	4
Starting the Vehicle.....	5
Baby Seat Installation.....	7
Windows & Vents.....	8
240-Volt electrical system	9
12-volt electrical system	10
Freshwater tank and water access.....	11
Greywater Tank	12
Water Pump.....	13
Toilet.....	14
Toilet Cassette	15
Gas Stove	16
Fridge.....	17
Lights.....	18
Dining Table.....	19
Power Points	20
Bottom Bed	21
Top Bed	22
Fuel.....	23
Jack & Spare Tyre	24
Additional Information.....	25
Dash warning lights	26

Try our online help hub.



Helphub.starrv.com helphub.jucy.com

Condo-Gen 3 vehicle MANUAL

Description of Keys



IGNITION KEY:

Use this key to start your vehicle



FRESH WATER KEY:

Use this key to lock/unlock the freshwater tank cap



Condo- Gen 3 vehicle **MANUAL**

Fire Extinguisher



FIRE EXTINGUISHER

Each vehicle is equipped with a dry chemical fire extinguisher, selected to address both type B fires (involving grease and liquids) and type C fires (involving electrical elements).

To deploy the extinguisher effectively, grasp the ring situated at the top of the bottle, direct the nozzle towards the base of the flames, and press down the lever firmly. Guide the nozzle from side to side to cover the entire width of the base of the flames.

* A fire extinguisher is attached to the interior of the vehicle, behind the back seats



SMOKE ALARM

Each vehicle is furnished with a smoke alarm, serving as a crucial element for your safety and security. This alarm is powered by a replaceable 9-volt battery. Should a replacement be warranted during the duration of your rental, kindly procure a new battery, retain the receipt and upon vehicle return reimbursement will be organized accordingly.

DO NOT disconnect the smoke alarm. It must be connected at all times, for your safety.

Try our online help hub.



Helphub.starrv.com helphub.jucy.com

Condo- Gen 3 vehicle MANUAL

Starting the Vehicle

Gear stick in parking mode



Gearstick must be in PARK and your foot on the pedal for the vehicle to start.

The dashboard will display a 'P' indicating the vehicle is in Park.

Start the vehicle using the ignition key.

Gear stick in driving mode



With your foot still on the brake pedal, pull the gear stick down into the 'D' position. The dashboard will display a 'D' indicating the vehicle is in Drive.

Try our online help hub.



Helphub.starrv.com helphub.jucy.com

Condo- Gen 3 vehicle MANUAL



To disengage the handbrake, grip the handle and feel for the button under your finger. Squeeze the button, then turn the handle in an anticlockwise direction.

The handle will be released and can be pushed away from you, towards the floor.

To engage the handbrake, grip the handle and pull it towards you.

Please note: The handbrake is located below the gear stick.

Try our online help hub.



Helphub.starrv.com helphub.jucy.com

Condo- Gen 3 vehicle MANUAL

Baby Seat Installation



The 2 anchor points for baby seats are located at the rear of the vehicle (as pictured).

To install the baby seat, feed the tether strap over the headrest and connect to the anchor point. Thread the vehicle seatbelt through the seat belt path on the baby seat, from one end and buckle on the other side.

Ensure the seatbelt is firmly secured.

Try our online help hub.



Helphub.starrv.com helphub.jucy.com

Condo- Gen 3 vehicle MANUAL

Windows & Vents

WINDOWS:

To use the window:

1. Push the window to the right



VENTS:

The vehicle is equipped with two vents – one in the kitchen and one above the top bed.

To open the vents, spin the ventilator around until the holes align.





Condo- Gen 3 vehicle MANUAL

240-Volt electrical system

To run the power points and to recharge the domestic battery, connect the vehicles 15AMP electrical cord to a 240-volt external power source. The above items will only work when plugged into power. It is recommended that the vehicle is plugged into power every 2nd night to keep the domestic battery charged.

To use the 240-volt electrical system:

1. The 240-volt external plug is located on the driver's side of the vehicle. Connect the cord to the vehicle and to the external power source.





Condo-Gen 3 vehicle MANUAL

12-volt electrical system

Your vehicle has two batteries. One for the engine and the other for the domestic functions.

The domestic battery operates the water pump, fridge, interior lights, and radio. The domestic battery is charged by the alternator when the vehicle is being driven and the 240-volt system when it is plugged into an external power source. and by solar energy.

The 12-volt electrical panel is located above the rear passenger seat, next to the kitchen. To turn it on, touch the screen.



1. Power Button – turn on to access domestic appliances
2. Night mode – turns the screen off
3. Outside lights – switch light on/off
4. Water pump – to turn on the pump for the fresh water
5. Fresh water level
6. Waste water level
7. Home page – return to home page
8. Warning light – illuminates if there is an issue
9. Battery power level – remaining power



Condo- Gen 3 vehicle MANUAL

Freshwater tank and water access



On board the vehicle is a freshwater system consisting of a water pump and freshwater tank.

The water tank has an 80L capacity and is located on the passenger side of the vehicle. This water is for the sink, shower and toilet flush.

To fill the freshwater tank:

1. Flip opens the compartment that says "Fresh Water Only"
2. Place the end of the water hose into the tank and connect the hose to the tap to fill the vehicle with fresh water.

Note: Do not use too much pressure as the tank must be vented when filling. In the event of an air bubble, simply remove the hose, reinsert and fill slowly again.

The tank is full when the water starts to overflow from the water inlet.

Please note: The water from the vehicle tap is not suitable for drinking.



Condo- Gen 3 vehicle MANUAL

Greywater Tank

The greywater holding tank collects wastewater from the kitchen sink. You can see the level of your water on the 12-volt switchboard as seen in the picture.

It is not uncommon for the greywater level indicator to give inaccurate reading. It may show 100% even if it is empty. We recommend emptying your greywater tank as regularly as possible.

To empty the greywater tank:

1. Collect the greywater hose from the storage compartment.
2. Connect the hose to the outlet. Make sure it is firmly attached.
3. Place the other end of the hose into a dump station disposal opening.
4. Open the tank but pulling the lever located at the base of the outlet and wait for it to empty
5. Once the grey water is empty, close the lever and remove the hose. Stow the hose away in the storage compartment.





Condo-Gen 3 vehicle MANUAL

Water Pump

To use the water pump:

1. Ensure there is water in your freshwater tank
2. On the domestic control panel, turn the water pump on. You will hear the pump quietly start up.



Please note: Avoid running the pump when the water tank is empty. Operating the pump continuously with no water can cause damage. When you are not using the water pump, ensure it is turned off.

Caution: Do not drink the water from the tap unless it's boiled first.



Condo- Gen 3 vehicle MANUAL

Toilet

It is highly recommended to regularly empty the toilet cassette, and it is mandatory to empty and clean it before returning the vehicle to the depot.

To use the toilet:

1. Turn on the water pump at the domestic control panel
2. Push the blue button on the toilet to fill the base with water



3. Once finished, adjust the grey lever on the bottom of the toilet to empty into the cassette.
4. Ensure the grey lever is in the closed position after use





Condo-Gen 3 vehicle MANUAL

Toilet Cassette

The vehicle comes equipped with a cassette container to store your toilet waste.

To empty the cassette:

1. Ensure the grey lever on the toilet is at the 'OFF' position. Lift up the back door and unlock the cassette door.
2. Lift up the blue lever and pull the cassette towards you
3. Adjust the pipe and unscrew the blue lid. Dispose of waste at a blackwater dump station
4. Insert the cassette back into the vehicle, ensuring it locks into place





Condo-Gen 3 vehicle MANUAL

Gas Stove

The vehicle is equipped with a gas stove.

Please Note: This stove is not designed for use with pans larger than 20cm.

To use the gas cooker:

1. You will need to unlock the LPG storage area, located on the side of the bottom bed. Slowly and carefully, turn the gas valve anticlockwise to open it. You should feel the valve loosen as you turn it.



2. Push the knob down. Press and turn the knob to 'IGNITE' or 'HIGH' setting
3. Hold the knob. Keep holding for a few seconds, then release
4. Adjust the flame by turning the knob to your desired setting.



Please note: Always have the vehicle well-ventilated while using the gas cooker
Do NOT leave the gas bottle valve on when not in use



Condo-Gen 3 vehicle MANUAL

Fridge

The fridge in your vehicle operates via the 12-volt and 240-volt system. To operate the fridge, follow these steps:

1. Turn on the fridge using the button inside the fridge
2. Check that the light on the cooling level is at 3 and the lights are on – this indicates the fridge is on and working
3. The thermostat can be found on the side of the fridge. Optimal range for the fridge is halfway between min and max temperature settings.



Fridge control panel

1. On/Off button
2. Cooling level setting (should be at 3)
3. Compressor status (Off – Orange, On – white)
4. Operation mode for the below 3 modes (5,6,7)
5. Eco Mode (should always be on this mode)
6. Quiet Mode
7. Performance Mode



Condo- Gen 3 vehicle MANUAL

Lights

The vehicle is equipped with cabin lights:

One on the top bed, two on the roof bed, one above the stove and one outside light.

To use the lights:

Make sure the Load button is switched on at the domestic control panel.



1. Top Bed Light

Use the switch to turn it on. This light is also equipped with a USB port



2. Roof lights

Touch the middle silver circle. Once to get a blue light and again to get a white light

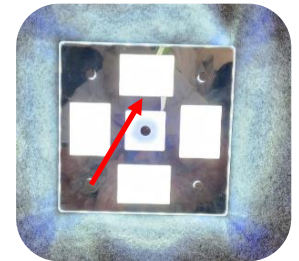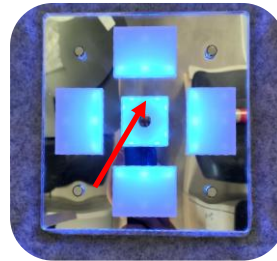

3. Kitchen Light

The switch is located on the light, and the light is also adjustable in different directions



4. Outside Light

Touch the outside light on the domestic control panel to turn this one on/off




Condo- Gen 3 vehicle MANUAL

Dining Table

Rear Dining:

The vehicle is equipped with an outside table connected to the kitchen cabinet

1. Unhook the elastic clip, squeeze the legs in then extend out until they click into place

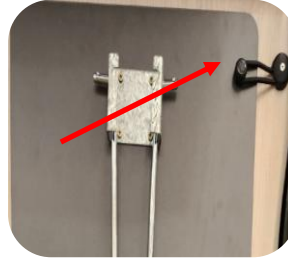

Inside Dining:

The vehicle is also equipped with an inside dining table

1. To set up, place the metal pole into the table holder bracket. Once the pole is secure, place the table on top (table is stored behind the rear passenger seat)



2. Position to where you would like the table and tighten the plastic bolts to hold it in place



3. You can extend the table by rotating out the extension board



Condo- Gen 3 vehicle MANUAL

Power Points

The vehicle is equipped with 2 x points, located in the corner of the lower bed and above the kitchen.

These power points will only work when the vehicle is plugged into an external power source



There are also 2 USB charger ports located in the corner of the lower bed, underneath the window on the driver's side and 1 USB charger port on the top bed light.

These will work when the vehicle is plugged into an external power source and when the 12-volt control panel is turned on.



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

Condo- Gen 3 vehicle MANUAL

Bottom Bed

To use the bottom bed:

1. Grip under the front board and pull out until it touches the frame of the rear seat.



2. Grab the folded squab and fit it between the back seat and larger squab.



3. Fit the small square squab between the two rear seats



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

Condo- Gen 3 vehicle MANUAL


Top Bed

To use the top bed:

1. Unclip both hooks to release the bed net



2. Pull the middle tab to get the mattress out, and pull until it stops. Use the foot pedal located on the side of the vehicle to assist with accessing the top bed safely

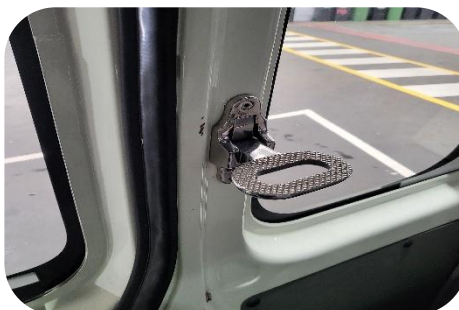

3. Top bed is now flat and secure



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

Condo- Gen 3 vehicle MANUAL

Fuel

When operating the vehicle, it is essential to confirm the type of fuel it requires. This vehicle used 91 unleaded.

The fuel lever is located below the steering wheel on the right-hand side.

To ensure you are using the correct fuel, always check the fuel sticker located on the fuel door or on the fuel cap. Additionally, review the rental agreement for the specific fuel requirements.



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

Condo- Gen 3 vehicle MANUAL

Jack & Spare Tyre

To access the jack tools, open the sliding door and locate the compartment on the left side. Inside this compartment, you will find the essential tools required for safely changing a tyre. Always ensure the vehicle is parked on a stable surface before using the tools.



The spare tyre can be found on the front of the vehicle, however, in some vehicles, it may be located on the back.

To access the spare tyre on the front, remove the wheel cover then use the wheel brace to remove the wheel nuts and release and remove the spare wheel.

To access the spare tyre located under the rear of the van, use the wheel brace as per the picture below. Unscrew the bolt located on the inside rear of the vehicle on the floor anticlockwise.



Be careful when as the tyre can heave and drop when released



Try our online help hub.



Helphub.starrv.com helphub.jucy.com

Condo- Gen 3 vehicle MANUAL

Additional Information








Tyre size	195/R15
Tyre pressure	50 PSI
Oil type	10W40
Coolant type	Red Coolant (any brand)

Note: **Do not mix coolant colours.** If the coolant in the vehicle is red, use red. If green, use green













Condo- Gen 3 vehicle MANUAL

Dash warning lights

Warning Light Symbol	Warning Light	Description	What to Do if the Light Comes On
	Brake Warning (Red)	Handbrake engaged or low brake fluid. If with ABS light, brake fault.	Pull over safely & avoid sudden braking. If the light comes on with ABS light, stop immediately & contact Roadside Assistance.
	ABS Warning (Amber)	ABS fault – brakes work without ABS. If with brake light, possible brake failure.	If on alone, drive cautiously & check as soon as possible. If with brake light, stop immediately & call Roadside Assistance.
	Electronic Stability Control (Amber)	Traction control fault; flashing = active, constant = fault.	Drive with caution. Restart engine; if still on, contact Roadside Assistance.
	Power Steering (Amber/Red)	Overheated or failed steering assist.	If red, take extra care steering. Pull over & contact Roadside Assistance.
	Airbag/SRS (Red)	Fault in airbag or seatbelt system.	Contact Roadside Assistance.
	Coolant Overheat (Red)	Engine overheating – possible low coolant or leak.	Stop immediately & contact Roadside Assistance.
	Battery Charge (Amber/Red)	Battery not charging.	Contact Roadside Assistance.



Condo- Gen 3 vehicle MANUAL

	Oil Pressure (Red)	Low oil pressure or high oil temp.	Stop immediately & contact Roadside Assistance.
	Engine Management (Amber)	Fault with engine or emissions.	Continue to destination & then contact Roadside Assistance.
	Immobilizer (Amber)	Anti-theft fault or key battery issue.	Continue driving & contact Roadside Assistance.
	Pre-Collision System (Amber/Red)	Active intervention or system fault.	If red or faulty, check for obstructions & clean sensors. System disabled until fixed.
	Stop & Start (Amber)	System deactivated or fault.	Safe to drive & contact Roadside Assistance if faulty.
	Parking Assist Sensor Fault (Amber)	Dirty or damaged parking sensor.	Parking alerts disabled – clean sensors, report fault.
	Radar Sensor Fault (Amber)	Rear cross traffic alert disabled.	Clean rear sensors, report if persists.
	Lane Departure Alert (Amber)	System off or fault.	Check if turned off; if faulty, contact Roadside Assistance.
	Tyre Pressure (Amber)	Low tyre pressure or puncture.	Inflate to spec; if flat, stop & call Roadside Assistance.
	Collision Avoidance (Amber/Red)	System active or fault.	If faulty, check sensors for obstruction. System disabled until fixed.