

Australia **The Malibu** Gen1



Vehicle manual.



helphubstarrvc.com



helphubjucy.com

The Malibu Gen1 vehicle

MANUAL

Contents

Description of keys	03
Vehicle equipment	04
Starting the vehicle	05
Windows & blinds	06
12-volt electrical system	07
Fresh water tank	08
Grey water tank	09
Portable toilet cassette	10
Portable gas stove	11
Tap & sink	13
Fridge	14
Lights	15
USB Chargers	16
Bed	17
Storage	21
Diesel fuel	22
Changing a tyre	23
Safety & operational features	24
Dash warning lights	31



helphub.starrv.com



helphub.jucy.com

01. Description of keys



IGNITION KEY:

Use the indicated ignition key to:

1. Start your vehicle



helphub.starrv.com



helphub.jucy.com

02. Vehicle equipment

FIRE EXTINGUISHER



Each vehicle is equipped with a dry chemical fire extinguisher, meticulously selected to address both type B fires (involving grease and liquids) and type C fires (involving electrical elements). To deploy the extinguisher effectively, grasp the ring situated atop the bottle, direct the nozzle towards the top of the flames, and press down the lever firmly. Guide the nozzle from side to side to cover the entire width of the base of the flames.

*Fire extinguisher is attached to the interior of the vehicle

SAFETY: Do not attempt to put out a fire if you are in any danger. If you are unable to control the fire, stay away from the vehicle in case of explosion.



03. Starting the vehicle

Gear stick must be in PARK and your foot on the pedal in order for the vehicle to start.



Gear stick in parking mode

The dashboard will display a 'P' indicating that the vehicle is in park. Start the vehicle using the ignition key.



Gear stick in driving mode

With your foot still on the brake pedal, pull the gear stick down into the 'D' position. The dashboard will display a 'D' indicating that the vehicle is in drive.

Disengage the hand brake by pulling it down. A red exclamation mark will disappear from the dashboard. To engage the handbrake, pull the handbrake up. A red exclamation mark will appear.

NOTE –

Handbrake is on the left-hand side of the driver seat. Do not forget to disengage the handbrake before you drive.





helphub.starrv.com



helphub.jucy.com

04. Blinds

The vehicle is equipped with privacy curtains for the rear window and side window as well as flyscreen curtains for the front windows. To attach the curtains, locate the correct curtain and magnetically attach to the metal surface of the window surround.





helphub.starrvc.com



helphub.jucy.com

05.12-volt electrical system

Your vehicle has two batteries. One in the engine compartment and one in the rear of the cabin. The battery inside the cabin is also called your domestic battery. The engine compartment battery is located under the driver's seat.

The domestic battery operates the water pump, fridge & interior lights. The domestic battery is charged by the alternator when the vehicle is being driven.



Diagram A

The 12-volt electrical panel is located at the rear of the vehicle in the kitchen area under the sink. To turn it on, push the yellow switch (Diagram A) up until it clicks.



Diagram B

This panel operates the water pump and light and must be turned on at all times to operate any device on the 12-volt system.

To turn the 12-volt electrical panel off, press the red button (Diagram B) and the yellow switch will flick down.

IMPORTANT – It is recommended that the vehicle is driven for 4–6 hours a day for the domestic battery to continue to operate the 12-volt system.



helphub.starrv.com



helphub.jucy.com

06. Fresh water tank

The freshwater tank is located under the bed/dining area on the right side.

To fill the freshwater tank:

1. Unscrew the compartment that says "Fresh water only".
2. Remove the cap from the water inlet.
3. Place the end of the water hose into the tank and connect the hose.



Note: Do not use too much pressure as the tank must be vented when filling. In the event of an air bubble, simply remove the hose, reinsert it and fill slowly again. The tank is full when the water starts to overflow from the water inlet.



helphub.starrv.com



helphub.jucy.com

07. Grey water tank

The grey water holding tank collects wastewater from the kitchen sink.

To empty the grey water tank:

1. Collect the grey water hose from the storage compartment.
2. Connect the hose to the outlet. Make sure it is firmly attached.
3. Place the other end of the hose into the dump station disposal opening.
4. Open the tank by pulling the lever located on the side of the outlet.
5. Once the grey water is empty, close the lever & remove the hose and stow away in the storage compartment.



Should the grey water tank become obstructed during your journey, we recommend inserting a hose into the grey water outlet as far as it reaches. Turn on the hose to its highest pressure setting and direct the flow of water into the tank until it reaches full capacity. Once achieved, withdraw the hose, facilitating the flow of grey water. If needed, repeat this process until the obstruction is cleared.



helphub.starrvc.com



helphub.jucy.com

08. Portable toilet cassette

It is highly recommended to regularly empty the toilet cassette, and it is mandatory to empty and clean it before returning the vehicle to the depot.

To set up the toilet:

1. Open the side latches to separate the toilet into two parts.
2. Add toilet chemical + 1–2L of water to the waste tank (bottom half).
3. Fill the top tank with clean water for flushing.
4. Reattach the top and bottom, then clip the latches shut.

To use the toilet:

1. Open the slide valve (below the seat) before use.
2. Flush by pressing the pump button a few times.
3. Always close the slide valve after flushing to keep odours in.

To empty the toilet:

1. Empty when the waste tank is around $\frac{3}{4}$ full.
2. Make sure the slide valve is closed.
3. Unclip and remove the top tank.
4. Carry the waste tank to a dump point (campground or RV station).
5. Unscrew the cap and pour waste slowly.
6. Rinse with clean water, shake, and empty again.

To refill the toilet:

1. Add fresh water and toilet chemical back into the waste tank.
2. Reassemble the toilet and refill the flush tank with clean water.
3. Make sure all caps and latches are tightly secured.





helphub.starrv.com



helphub.jucy.com

9. Portable gas stove

The vehicle is equipped with a portable butane gas stove which can be found in the kitchen compartments in a black carry case.

Inside the vehicle, the cooker is to be only used on the kitchen stove but can be used outside on a side table.

The cooker is designed to be used for very short periods – no longer than fifteen minutes at a time.



1. Remove gas cooker from the black carry case and place on a flat surface.



2. Open cartridge cover and place gas cartridge in.




3. Turn the ignition knob to "OFF" and set the cartridge lock lever to "UNLOAD".



helphub.starrvc.com




helphub.jucy.com

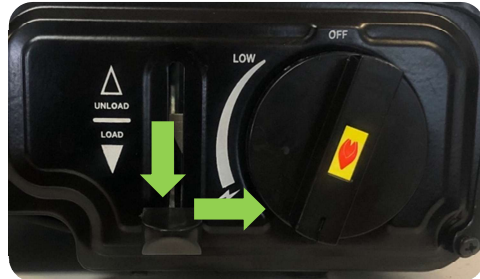

4. Open the cartridge cover, slide the gas cartridge, top end first and with its notch up, in the compartment.
5. Align cartridge collar notch with the locator tab on the gas cooker as per photo.
6. Push and turn the knob to anti-clockwise past the ⚡ position until a click is heard.

Please Note: If the burner fails to light, immediately turn the ignition knob to "OFF" position and restart again.

The flame can be controlled by turning the ignition knob between the "HIGH" and "LOW" position.

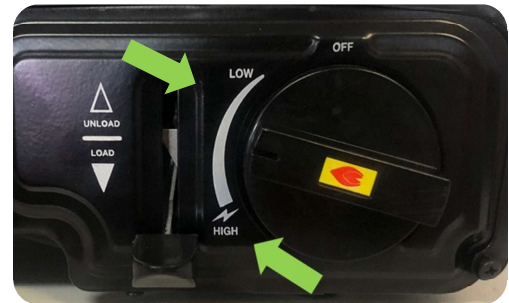

Turn the ignition knob to "OFF" to shut off fuel supply.

Wait until the flame is fully extinguished before performing the next step.

Raise the cartridge lever to "UNLOAD" and remove the gas cartridge from the compartment.

Do not leave the gas bottle inside the gas cooker when not in use.



helphub.starrv.com



helphub.jucy.com

10. Tap & sink



Diagram A

The vehicle comes equipped with a water system. To operate the tap, ensure the yellow switch on the main control panel (see section 5) is flicked up and the orange switch located on the wall in the dining area is on and illuminated. (See diagram A)



Diagram B

Hold the tap handle down for the water to release (See diagram B)



helphub.starrv.com



helphub.jucy.com

11. Fridge

The fridge in your vehicle operates via the 12-volt system. To operate the fridge, ensure the yellow switch on the main control panel is flicked up.



IMPORTANT – It is recommended that the vehicle is driven for 4-6 hours a day for the domestic battery to continue to operate the 12-volt system.



helphub.starrv.com



helphub.jucy.com

12. Lights

To operate the cabin lights, turn on using the light switch.

Switching to the left turns off the light, switching to the middle allows the light to turn on when the doors are opened and switching to the right turns the light on.





helphub.starrv.com



helphub.jucy.com

13. USB chargers

The vehicle is equipped with 2 USB Powerpoints & 1 USB car charger in the dining area

These run off the 12-volt battery and will only work if the main power button is switched on.





helphub.starr.com



helphub.jucy.com

14. Bed

The vehicle is equipped with 1 double bed that also serves as the dining area during the day.

To make the bed, follow the below steps:



1. To make the bed remove the seat squabs off the seat base.



2. Remove the loose plywood from the left & right-hand side.



3. Once the seat squabs & loose plywood have been removed. Open the hinged seat base to the vertical position against the tabletop.




4. The bed base should now look like this, as per photo.



helphub.starrv.com



helphub.jucy.com

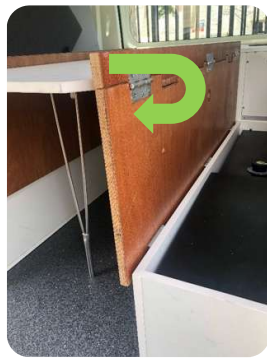

5. Bend the top part of the plywood down on the left & right hand side of the seat base.



6. Once you have completed step 5, lift the middle table up, and tuck the left & right seat base underneath the middle table, press down on middle table to see if it is secured.



7. Place the left & right-hand loose plywood with the cut-outs, can now be placed between the seat back alloy strip and on top of the vertical section matching the corresponding cut-outs to hold the panel in place.




8. Make sure the plywood has been placed in correctly & is flat & secured. Put weight on the left & right-hand side of each plywood so its firm.



helphub.starrvc.com



helphub.jucy.com

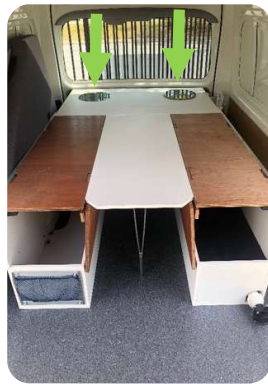

9. Bed base should now be secured and filled with the bed squabs. Ensure the sink is covered and wiped down before placing bed squabs on.



10. Rear bed base to be placed on the kitchen bench.



11. Rear bed base squab placed firmly on the kitchen bench & now place the rest of the bed squabs on to the bed.



12. Place the remaining 3 bed squabs on to the bed, ensure the squab with the 4 velcro tabs is placed in the middle.



helphub.starrv.com



helphub.jucy.com



13. Place the middle bed squab in the middle with the 4 velcro tabs place flat and firm on the middle part of the bed.



14. Place the left- & right-hand bed squabs onto each side of the bed, ensure you secure all 4 velcro's together so the bed squabs are all in one.



15. Once all bed squabs are firmly placed and secured, bed is now ready.



helphub.starrv.com



helphub.jucy.com

15. Storage

The vehicle has a dedicated storage area under the left seat of the bed/dining area and under the seat in the cabin area.





helphub.starr.com



helphub.jucy.com

16. Diesel fuel

The vehicle accepts DIESEL only. DO NOT refill the vehicle with any other fuel or fluid. The fuel tank cap is marked with “Fill me up with Diesel” and can be opened from the driver’s seat pulling the fuel lever. The fuel filling location is located on the passenger side of the vehicle.

Once filled with diesel, place the fuel cap on the inlet and turn the cap to lock it.



IMPORTANT: The vehicle accepts DIESEL only. If you fill the vehicle with diesel, water or AdBlue, please do not start the engine and call JUCY Roadside Assistance immediately.



helphub.starrv.com



helphub.jucy.com

17. Changing a tyre

Prepare the Vehicle:

Stop the vehicle in a safe, flat, and stable area.

Turn off the engine and engage the parking brake.

Retrieve the Tools:

The tool bag under the passenger seat includes:

- Rod for spanner
- Bolt spanner
- Jack

Loosen the Wheel Bolts: Use the bolt spanner, extension, and rod to loosen the wheel bolts by one turn.

Position the Jack: Extend the jack slightly and position it at the designated lifting point.

Lift the Vehicle: Raise the vehicle using the jack until the wheel is off the ground.

Take Off the Punctured Wheel: Use the wrench to remove the spare wheel from under the vehicle and free it from its holder.

Install the Spare Wheel: Place the spare wheel, lining up the holes with the pins.

Tighten the bolts by using the bolt spanner, extension and rod - crossing from one bolt to the opposite one.

Lower the Car: Lower the car back down and remove the jack.

Don't forget to:

Tighten the wheel bolts fully.

Put the punctured wheel back in its holder and tighten the knob.

Store the tools back in their bag and place the bag under the passenger seat.



helphub.starrv.com




helphub.jucy.com

18. Safety & operational features

Seat Adjustment Guide:

1. **Longitudinal Adjustment**
 - Lift lever (1) to move the seat forward or backward.
 - Ensure your arms rest comfortably on the steering wheel when seated.
2. **Backrest Angle Adjustment**
 - Lift lever (2) to adjust the backrest angle.
3. **Height Adjustment**
 - To raise: While seated, lift lever (3) upwards and slightly lift your body.
 - To lower: While seated, push lever (3) downwards and shift your weight to lower the seat.
4. **Lumber Support Adjustment**
 - Press switch left or right (4) to customize lumbar support

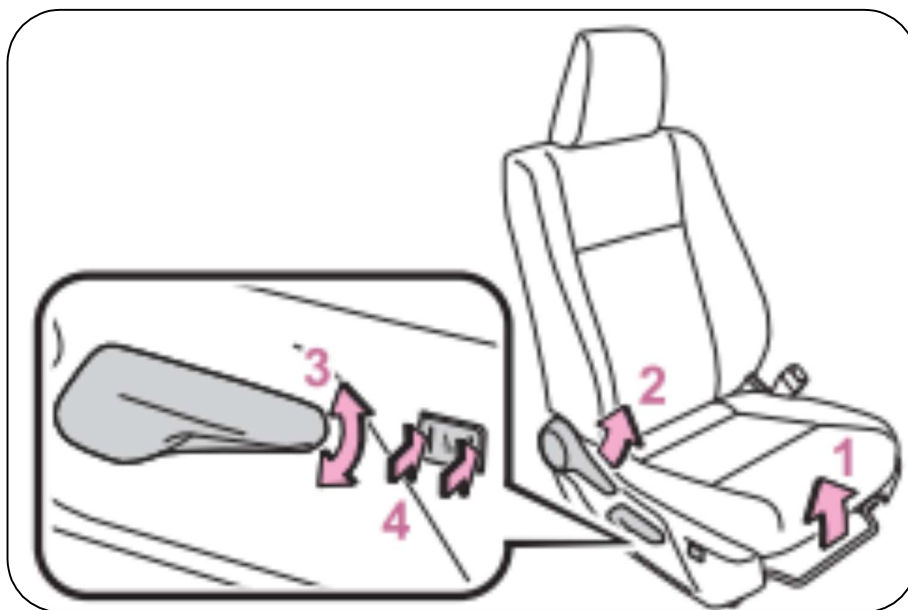



helphub.starrv.com




helphub.jucy.com

Exterior Mirror Adjustment Guide

The exterior mirrors can be adjusted when the engine switch is in ACC or ON


1. To select a mirror to adjust, turn the switch

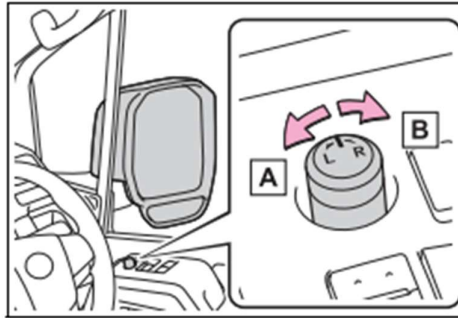

A. Left

B. Right

2. To adjust the selected mirror, operate the switch

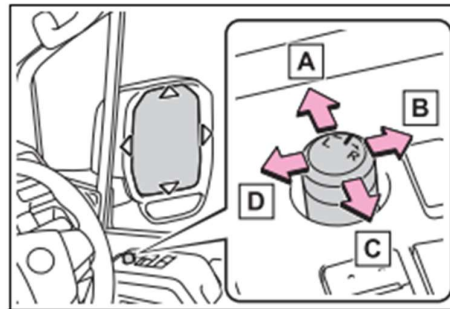

A. Up


B. Right

C. Down

D. Left

External Lights

The auto function for headlights automatically adjusts your vehicle's lights based on surrounding light conditions. It activates the headlights at dusk, in tunnels, or during low visibility, ensuring optimal safety and convenience without manual intervention. To turn this on, turn the ring of the right stalk to the AUTO position (see 3)

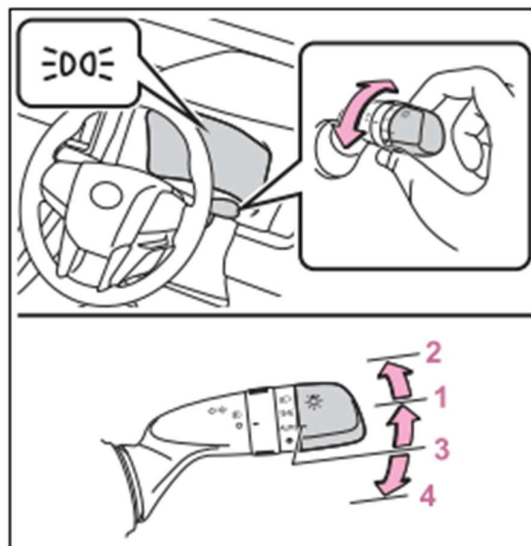



helphub.starrvc.com








helphub.jucy.com

Window Washing


The left stalk controls the windscreen wiper and washer.

Windscreen Wiper/ Washer Operation

-  Off
-  Intermittent operation
-  Low Speed operation
-  High Speed operation
-  Temporary operation

Air Conditioning System

- A.** Airflow mode control knob
- B.** Fan speed control knob
- C.** Temperature control knob
- D.** "A/C" switch
- E.** Outside/recirculated air mode switch
- F.** Rear window defogger and outside rear-view mirror defoggers switch

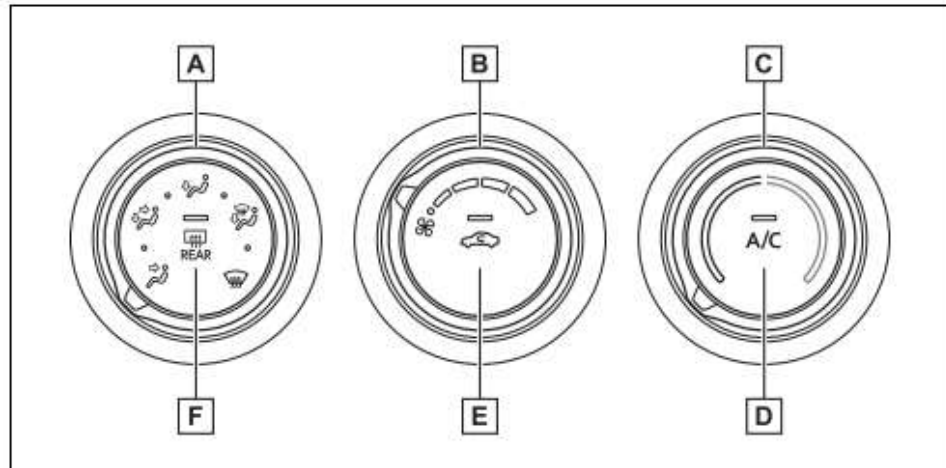

Adjusting the temperature setting:

Turn the temperature control knob (C) clockwise (warm) or counterclockwise (cool).

If "A/C" (D) is not pressed, the system will blow ambient temperature air or heated air.

Adjusting the fan speed setting

Turn the fan speed control knob (B) clockwise (increase) or counterclockwise (decrease).

Turn the dial to the left end and turn off the fan.



helphub.starrv.com



helphub.jucy.com

Changing the airflow mode

Turn the airflow mode control knob **(A)** to the desired position. The positions between the air outlet selections can also be selected for more delicate adjustment.

Switching between outside air and recirculated air modes

Press the outside/recirculated air mode switch **(E)**.

The mode switches between outside air mode and recirculated air mode each time the switch is operated.

When recirculated air mode is selected, the indicator illuminates on the outside/recirculated air mode switch **(E)**

Set cooling and dehumidification function

Press the "A/C" switch **(D)**.

When the function is on, the indicator illuminates on the "A/C" switch.

Defogging the windshield

Defoggers are used to defog the windshield and front side windows.

Turn the airflow mode control knob **(A)** to the windshield defogger position.

Set the outside/recirculated air mode switch **(E)** to outside air mode if the recirculated air mode is used. (It may switch automatically.)

To defog the windshield and the front side windows quickly, turn the air flow and temperature up.

Vehicles with "A/C" switch: If the dehumidification function is not operating, press to operate the dehumidification function.




helphub.starv.com



helphub.jucy.com


Display Screen

- A. Tachometer
- B. Outside temperature
- C. Clock
- D. Multi Information display
- E. Speedometer
- F. Fuel gauge
- G. Odometer, trip meter and instrument cluster light control display
- H. Shift position and shift range
- I. Engine coolant temperature gauge
- J. Odometer/ trip meter switch

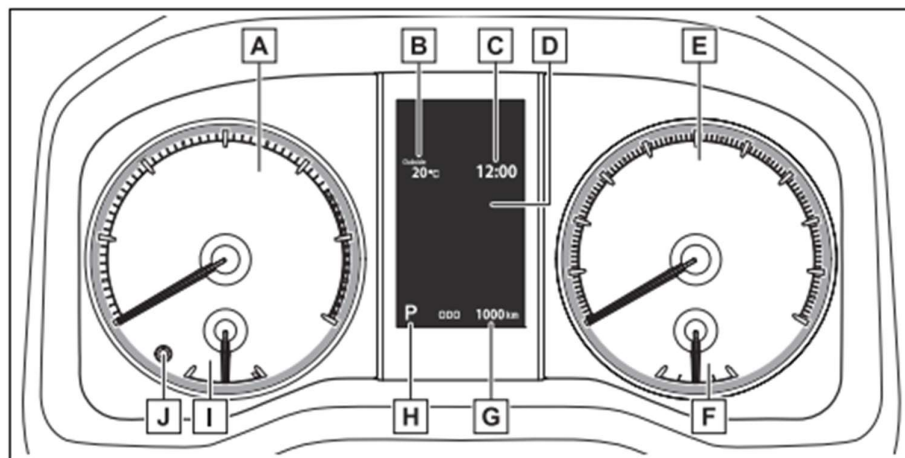

Control buttons

- A. Select menu icons </>
- B. Change displayed content, scroll up/ down the screen or move the cursor up/ down ^/▼
- C. Return to the previous screen
- D. Answer/ end call through Bluetooth.

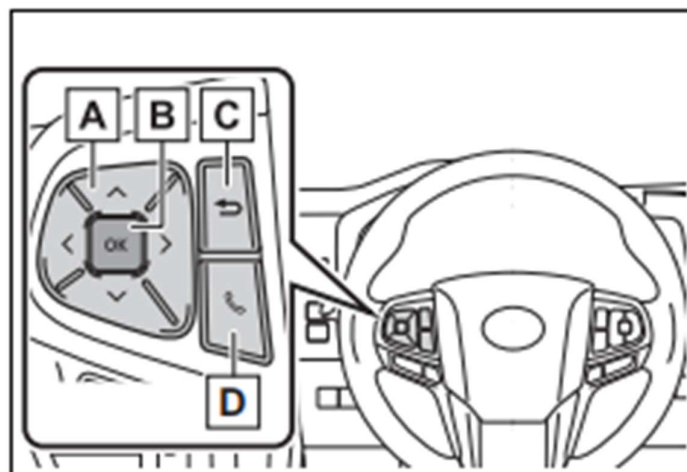



helphub.starrvc.com




helphub.jucy.com

Electronic Cruise Control

The electronic Cruise Control is a driver assistance feature that maintains a set vehicle speed without needing to press the accelerator. The Cruise Control buttons are located on the right side of the steering wheel.

Activating the Device

To activate, press button B. The symbol will appear on the instrument panel to show activation

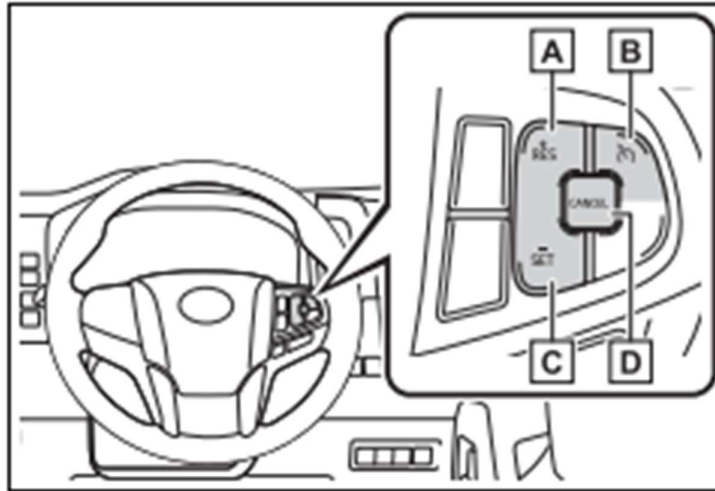

Setting the Desired Speed

Activate the system.

Once the vehicle reaches the desired speed, press and release the SET + (or SET -) button. The vehicle will automatically maintain the speed once the accelerator is released.

You can temporarily accelerate by pressing the accelerator pedal, and when you release it, the vehicle will return to the stored speed. The vehicle speed may slightly exceed the set speed when traveling downhill.

Warning: Ensure the vehicle is at a constant speed on a flat surface before pressing the SET + (or SET -) buttons.

Increasing / Decreasing Speed

- **Increasing Speed:** Press and hold SET + to gradually increase the speed. Release the button to store the new speed.
- **Decreasing Speed:** Press and hold SET - to decrease the speed. Release the button to store the new speed.

Deactivating the Device

- To deactivate, press the CANCEL button or press the brake pedal.

The system will also deactivate if the electric parking brake (EPB) is engaged or if the braking system is triggered



helphub.starrv.com



helphub.jucy.com

Media

Pairing a Bluetooth® Device

1. Activate Bluetooth on your phone:

Go to your phone's settings and turn on Bluetooth, making sure it's set to "discoverable" or "searchable".

2. Access the car's Bluetooth settings:

On your HiAce's audio system, locate the "Setup" or "Menu" button. Then, navigate to the Bluetooth settings (this may be under "Connections" or a similar heading).

3. Start the pairing process:

In the Bluetooth menu, select the option to "Add new device" or "Pair a phone".

4. Select your phone:

The car's system will begin searching for available devices. When your phone appears on the list, select it.

5. Confirm the pairing code:

A pairing code will appear on both your phone and the car's screen. Ensure the codes match and confirm the pairing on both devices.

6. Complete the connection:






Once paired, your phone will be connected to the car's Bluetooth system, allowing you to stream audio and use hands-free calling.

Additional Information

Tyre Size	195R15C
Tyre Pressure	45-50 PSI
Oil Type	5W30
Coolant type	Red coolant (any brand)



19. Dash warning lights

Warning Light Symbol	Warning Light	Description	What to Do if the Light Comes On
	Brake Warning (Red)	Handbrake engaged or low brake fluid. If with ABS light, brake fault.	Pull over safely & avoid sudden braking. If the light comes on with ABS light, stop immediately & contact Roadside Assistance.
	ABS Warning (Amber)	ABS fault – brakes work without ABS. If with brake light, possible brake failure.	If on alone, drive cautiously & check as soon as possible. If with brake light, stop immediately & call Roadside Assistance.
	Electronic Stability Control (Amber)	Traction control fault; flashing = active, constant = fault.	Drive with caution. Restart engine; if still on, contact Roadside Assistance.
	Power Steering (Amber/Red)	Overheated or failed steering assist.	If red, take extra care steering. Pull over & contact Roadside Assistance.
	Airbag/SRS (Red)	Fault in airbag or seatbelt system.	Contact Roadside Assistance.
	Coolant Overheat (Red)	Engine overheating – possible low coolant or leak.	Stop immediately & contact Roadside Assistance.
	Battery Charge (Amber/Red)	Battery not charging.	Contact Roadside Assistance.
	Oil Pressure (Red)	Low oil pressure or high oil temp.	Stop immediately & contact Roadside Assistance.












Try our online **help hub.**



helphub.starrv.com



helphub.jucy.com

	Engine Management (Amber)	Fault with engine or emissions.	Continue to destination & then contact Roadside Assistance.
	Immobilizer (Amber)	Anti-theft fault or key battery issue.	Continue driving & contact Roadside Assistance.
	Pre-Collision System (Amber/Red)	Active intervention or system fault.	If red or faulty, check for obstructions & clean sensors. System disabled until fixed.
	Stop & Start (Amber)	System deactivated or fault.	Safe to drive & contact Roadside Assistance if faulty.
	Parking Assist Sensor Fault (Amber)	Dirty or damaged parking sensor.	Parking alerts disabled – clean sensors, report fault.
	Radar Sensor Fault (Amber)	Rear cross traffic alert disabled.	Clean rear sensors, report if persists.
	Lane Departure Alert (Amber)	System off or fault.	Check if turned off; if faulty, contact Roadside Assistance.
	Tyre Pressure (Amber)	Low tyre pressure or puncture.	Inflate to spec; if flat, stop & call Roadside Assistance.
	Glow Plugs (Amber)	Fault with glow plugs or relay.	Safe to drive short term – contact Roadside Assistance.
	Diesel Particulate Filter (Amber)	DPF regenerating or blocked.	Continue driving for 15 mins & if persists, call Roadside Assistance.
	Collision Avoidance (Amber/Red)	System active or fault.	If faulty, check sensors for obstruction. System disabled until fixed.