

Australia **Condo**_{Gen2}



Vehicle manual.



helphub.starrv.com



helphub.jucy.com

Condo Gen2 vehicle **MANUAL**

Contents

<u>Description of keys</u>	03
<u>Vehicle equipment</u>	04
<u>Starting the vehicle</u>	05
<u>Baby seat installation</u>	06
<u>Windows & vents</u>	07
<u>240-volt electrical system</u>	08
<u>12-volt electrical system</u>	09
<u>Fresh water tank & water access</u>	10
<u>Grey water tank</u>	11
<u>Water pump</u>	12
<u>Toilet</u>	13
<u>Toilet cassette</u>	14
<u>Gas bottle</u>	15
<u>Stovetop</u>	16
<u>Tap & sink</u>	17
<u>Fridge</u>	18
<u>Lights</u>	19
<u>Dining table</u>	20
<u>Power points</u>	21
<u>Bed</u>	22
<u>Storage</u>	26
<u>Fuel</u>	27
<u>Spare Tyre and Tools</u>	28



helphub.starrv.com



helphub.jucy.com

01. Description of keys



IGNITION KEY:

Use for:

1. Start your vehicle



FRESH WATER KEY:

Use for:

1. Unlock/ lock freshwater compartment



helphub.starrv.com



helphub.jucy.com

02. Vehicle equipment



FIRE EXTINGUISHER

Each vehicle is equipped with a dry chemical fire extinguisher, meticulously selected to address both type B fires (involving grease and liquids) and type C fires (involving electrical elements). To deploy the extinguisher effectively, grasp the ring situated atop the bottle, direct the nozzle towards the top of the flames, and press down the lever firmly. Guide the nozzle from side to side to cover the entire width of the base of the flames.

*Fire extinguisher is attached to the interior of the vehicle behind the passenger side rear seat.



SMOKE ALARM

Each vehicle is furnished with a smoke alarm, serving as a crucial element for your safety and security. This alarm is energized by a replaceable 9-volt battery. Should a replacement be warranted during the duration of your rental, kindly procure a new battery, retain the receipt, and upon vehicle return, reimbursement will be facilitated accordingly.

*DO NOT DISCONNECT THE SMOKE ALARM. IT MUST BE CONNECTED AT ALL TIMES FOR YOUR SAFETY.



helphub.starrv.com



helphub.jucy.com

03. Starting the vehicle

Gear stick must be in PARK and your foot on the pedal in order for the vehicle to start.



Gear stick in parking mode

The dashboard will display a 'P' indicating that the vehicle is in park. Start the vehicle using the ignition key.



Gear stick in driving mode

With your foot still on the brake pedal, pull the gear stick down into the 'D' position. The dashboard will display a 'D' indicating that the vehicle is in drive.

Disengage the hand brake by twisting & pushing it down. A red exclamation mark will disappear from the dashboard. To engage the handbrake, pull the handbrake up. A red exclamation mark will appear.

CAUTION – Handbrake is located below the gear stick.





helphub.starrv.com



helphub.jucy.com

04. Baby seat installation

The 2 anchor points for baby seats are located on the rear of the seat (as pictured). To install the baby chair, feed the tether strap over the headrest and connect to the anchor point. Thread the vehicle seatbelt through the seat belt path on the baby seat from one end and buckle on the other side. Ensure the seatbelt is firmly secured.



Try our online **help hub**.



helphub.starrv.com



helphub.jucy.com

05. Windows

To open the windows on board the vehicle, unlatch the handle and push the window to the right.





helphub.starrv.com



helphub.jucy.com

06.240-volt electrical system

To use the power points and to recharge the house battery, connect the vehicles 15AMP electrical cord to a 240-volt external power source. The above items will only work when plugged into power. It is recommended that the vehicle is plugged into power every 2nd night to keep the house battery charged.

The 240-volt external plug is located on the driver's side of the vehicle.



*Please ensure to plug in on driver's side. The outlet on the passenger side is intended to plug in your own accessories ONCE the vehicle has been plugged into an external power source from the driver's side



helphub.starrv.com




helphub.jucy.com

07.12-volt electrical system

The vehicle has two batteries. One in the engine compartment and one in the rear of the cabin. The battery inside the cabin is also called the domestic battery. The engine compartment battery is located under the passenger's side cabin floor, in the main driver's cabin.

The domestic battery operates the water pump, fridge & interior lights. The domestic battery is charged by the alternator when the vehicle is being driven and the 240-volt system when it is plugged into mains power source.

The 12-volt electrical panel is located in the rear of the vehicle above the kitchen sink. To turn it on, press the load button. You will see the load button change colour.

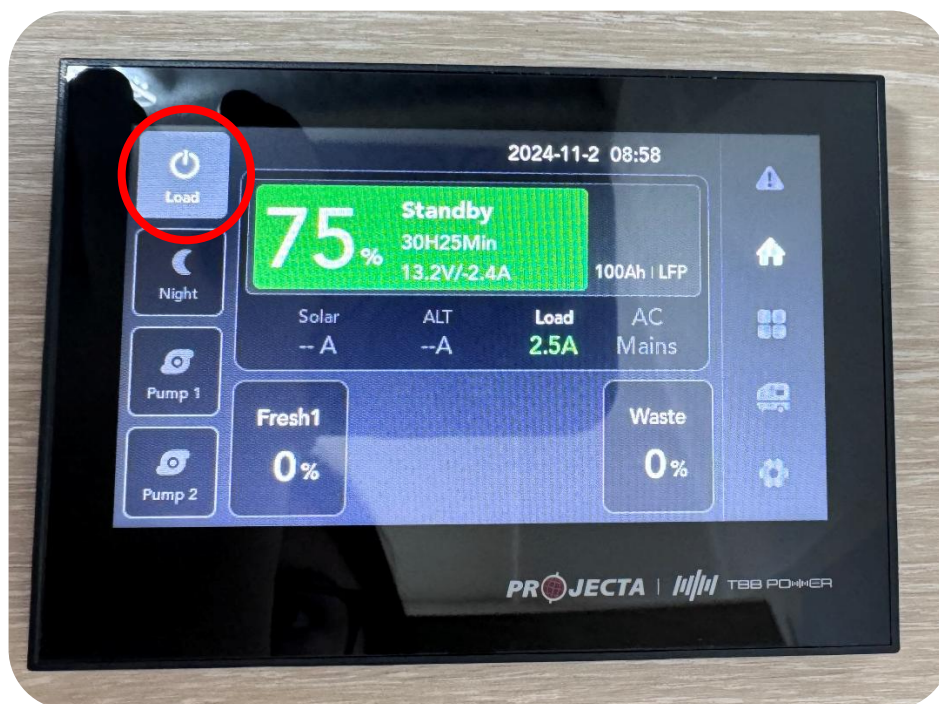

This panel operates the water pump and light and must be turned on at all times to operate any device on the 12-volt system.

Please Note: The vehicle is fitted with a kill switch located next to the control panel. If your 12-volt does not work, please flick the kill switch up.



helphub.starrv.com



helphub.jucy.com

08. Fresh water tank & water access



On board the vehicle is a freshwater system consisting of a water pump and freshwater tank. The water tank has a 50L freshwater tank and is located on the passenger side of the vehicle. This water is for the sink and toilet flush.


To fill the freshwater tank:

1. Unlock the compartment that says "Fresh water only" with the black key on your keyring.
2. Remove the cap from the water inlet.
3. Place the end of the water hose into the tank and connect the hose to the tap to fill the vehicle with fresh water.



Note: Do not use too much pressure as the tank must be vented when filling. In the event of an air bubble, simply remove the hose, reinsert it and fill slowly again. The tank is full when the water starts to overflow from the water inlet.

You can check the level of your water on the 12-volt switchboard as seen below.

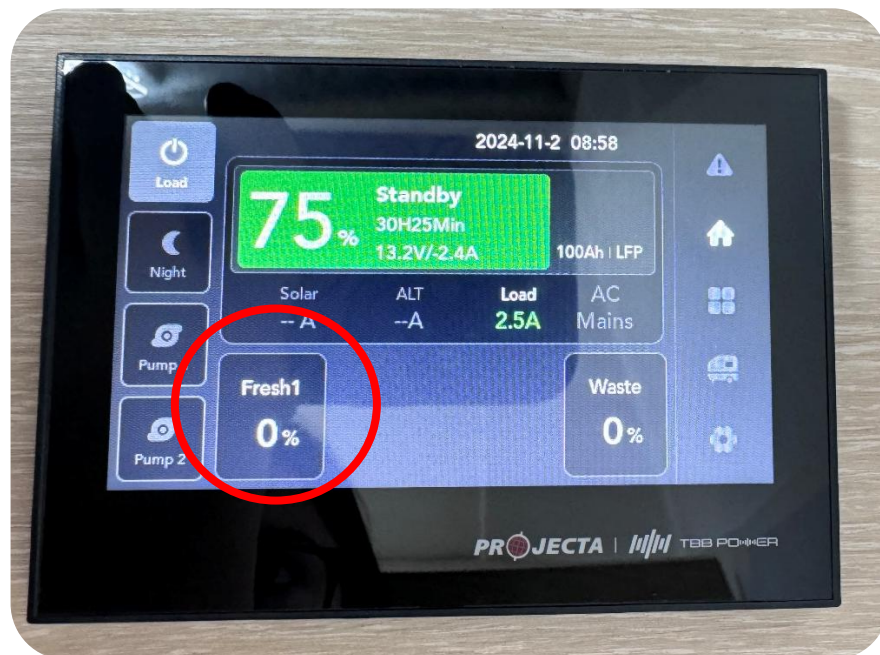




helphub.starrv.com



helphub.jucy.com

09. Grey water tank

The grey water holding tank collects wastewater from the kitchen sink. You can check the level of your water on the 12-volt switchboard as seen below.

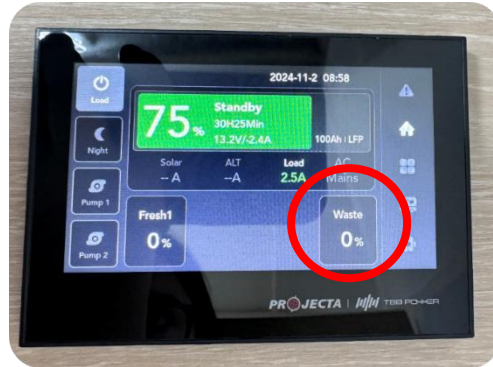

It is not uncommon for the grey water level indicator to give an inaccurate reading. It may show 100% even if it is empty. We recommend emptying your grey water tank as regularly as possible.

To empty the greywater tank:

1. Collect the grey water hose from the storage compartment.
2. Connect the hose to the outlet. Make sure it is firmly attached by pulling down the silver levers on each side of the attachment.



3. Place the other end of the hose into the dump station disposal opening.
4. Open the tank by turning the red lever so it is parallel with the pipe and wait for it to empty.
5. Once the grey water is empty, close the lever & remove the hose and stow away in the storage compartment.

Should the grey water tank become obstructed during your journey, we recommend inserting a hose into the grey water outlet as far as it reaches. Turn on the hose to its highest pressure setting and direct the flow of water into the tank until it reaches full capacity. Once achieved, withdraw the hose, facilitating the flow of grey water. If needed, repeat this process until the obstruction is cleared.




helphub.starrv.com



helphub.jucy.com

10. Water pump

To use water on board the vehicle, ensure there is water in your freshwater tank outside. On the 12-volt panel, press the pump 1 symbol once. You will hear the pump start up. The pump operates as part of the 12-volt system. When you are not using the water pump, ensure it is turned off. You must have this button on to operate the kitchen tap.

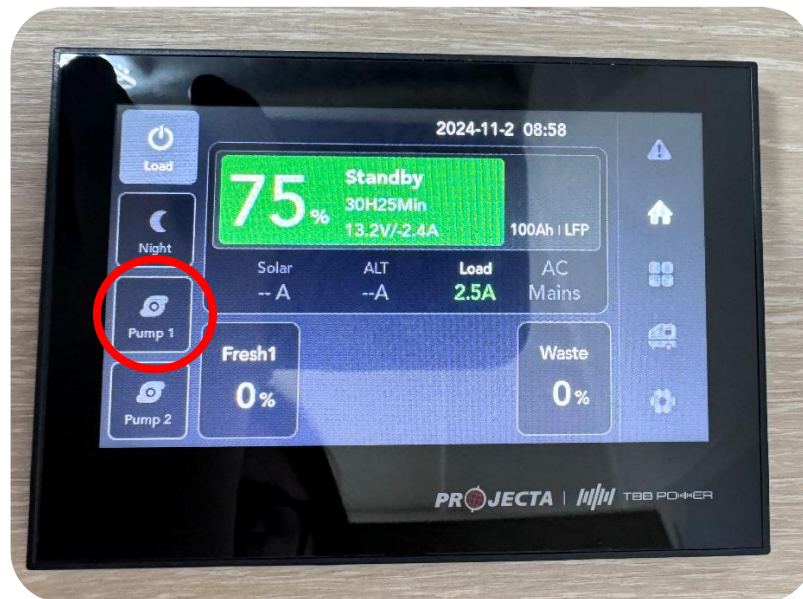

Please Note: Avoid running the pump when the water tank is empty. Operating the pump continuously with no water can cause damage.



helphub.starrv.com



helphub.jucy.com

11. Toilet

1. Turn on the water pump on the 12-volt control panel.



Diagram A

2. Push the blue button on the toilet to fill the base with water (Diagram A)



Diagram B

3. Once finished, adjust the lever on the bottom of the toilet to empty into cassette (Diagram B)



Diagram C

4. Ensure the lever is in the closed position after use (Diagram C)



helphub.starrv.com



helphub.jucy.com

12. Toilet cassette

It is highly recommended to regularly empty the toilet cassette, and it is mandatory to empty and clean it before returning the vehicle to the depot. To empty the cassette, lift the blue lever and remove the entire cassette from the vehicle.

Should the cassette become jammed, refrain from applying excessive force. Instead, ensure that the toilet cavity inside the vehicle is securely closed. Once the cassette is removed from the vehicle, rotate the pour-out spout, and unscrew the cap. Dispose of the waste at a designated black water dump point.

After emptying the toilet cassette, rinse it thoroughly and repeat the emptying process. Then, add a toilet chemical along with half to a litre of water.

Please Note: It is crucial for the cassette to click back into position to align with the toilet above.





helphub.starrv.com



helphub.jucy.com

13. Gas bottle



The gas bottle is located on the driver's sliding door side of the vehicle. There is a cupboard marked by an L.P. Gas storage label.

IMPORTANT: Never drive with the gas bottle turned to the 'open' position.

To open the gas bottle, rotate the valve fully in an anticlockwise direction. To close the gas bottle, turn the valve on top of the gas bottle clockwise until it's securely tightened.

If you detect the smell of gas:

1. Extinguish all open flames and smoking materials.
2. Refrain from touching any electrical switches.
3. Shut off the gas supply at the gas bottle using the valve on top of the bottle.
4. Open doors, windows, hatches, and any other ventilation openings.
5. Evacuate the area until the gas odour dissipates.
6. Contact JUCY Car Rentals for assistance.



helphub.starrv.com



helphub.jucy.com

14. Stovetop

How to operate the stove:

To ignite the stove in the vehicle, follow these steps:

1. Locate the gas bottle on the exterior of the van and fully turn the valve on top of the gas bottle to the 'open' position.
2. Press in, hold down, and turn the burner knob to your desired heat level.
3. While continuing to push in the burner knob, press the igniter switch until the gas ignites. Maintain pressure on the burner knob.
4. Wait approximately 15 seconds before slowly releasing the burner knob.

Please Note: If the flame extinguishes, the burner knob may have been released too soon. Repeat steps two to four and try again.





helphub.starrv.com



helphub.jucy.com

15. Tap and sink

The vehicle comes equipped with a water system. To operate the tap, turn on the water pump switch on the control panel. You will then be able to turn the tap on.





helphub.starrv.com



helphub.jucy.com

16. Fridge

The fridge in your vehicle operates via the 12-volt & 240-volt system. To operate the fridge, follow the below steps:

1. Turn on the fridge switch on your control panel.
2. Check that the blue light is on in the fridge above the power button – this will indicate the fridge is on and working.
3. The thermostat can be found on the side of the fridge. Optimal range for the fridge is halfway between the minimum and maximum temperature settings.





helphub.starrv.com



helphub.jucy.com

17.Lights

To operate the cabin lights, press the load button on the main control panel & turn the respective light on at the power switch located below the main control panel.

From left to right:- switch number 1 is for the main cabin lights, switch number 2 is for the bed light and switch number 3 is for the outside light.



The light in the cabins have four brightness settings. To change this, click the power button in the middle of the light.
There is a blue light setting and three brightness levels as seen below.





helphub.starrv.com



helphub.jucy.com

18. Dining table

Rear dining

The vehicle is equipped with an outside table connected to the kitchen cabinet.

To set up, unhook the bungee clip and extend the table leg.



Inside dining

The vehicle is equipped with an inside dining table.

To set up, place the table mount onto the wooden sideboard.





helphub.starrv.com



helphub.jucy.com

19. Power points

The vehicle is equipped with 2 power points located beside the bed. This will only work when the vehicle is plugged into 240-volt mains power.

The vehicle is equipped with 1x cigarette port and 2x USB charger ports beside the bed & 1x cigarette port and 2x USB charger ports in the kitchen area. These will work when the vehicle is plugged in and when the 12-volt control panel is turned on.





helphub.starrv.com



helphub.jucy.com

20. Bed

The vehicle is equipped with 2 double beds.

Bottom Bed

1. Locate the small square squab on the rear facing bench seat.



2. Make sure that the small square squab is firmly secured in for safety reasons.



3. Undo the black bungy strap.



4. Pull the bed towards the two rear seats until they are connected.



Try our online **help hub**.



helphub.starrv.com



helphub.jucy.com

5. Lay the small squab out to connect to the other side.



6. All 3 squabs should now be flat and secured.



Try our online **help hub**.



helphub.starrv.com



helphub.jucy.com

Top Bed

To access the top bed, securely clip the top of the ladder into the bed frame.

1. Unclip both hooks to release the bed net.



2. Pull middle tab to get the mattress out.



3. Top bed is now flat and secure.



Try our online **help hub**.



helphub.starrv.com



helphub.jucy.com

4. To access the top bed you will need to step on the rear seat. **DO NOT** step on the middle bottom squab.



5. Securely place your foot on the side foot ladder, located on the right or left handside of the sliding door beams.



Try our online **help hub.**



helphub.starrv.com



helphub.jucy.com

21. Storage

The vehicle has a dedicated storage area located under the middle compartment of the bottom bed as well as various cupboards throughout.





helphub.starrv.com



helphub.jucy.com

22. Fuel

When operating the vehicle, it is essential to confirm the type of fuel it requires, as some vehicles use diesel fuel while others use unleaded fuel. To ensure you are using the correct fuel, always check the fuel sticker located on the fuel door or on the fuel cap. Additionally, review the rental agreement for the specific fuel requirements.





23. Spare Tyre and Tools

To access the tools, open the sliding door and locate the compartment on the left side.

Inside this compartment, you will find the essential tools required for safely changing a tyre.

Always ensure the vehicle is parked on a stable surface before using the tools.



The spare tyre can be found underneath at the back of the vehicle.

To access the spare tyre located under the rear of the van, use the wheel brace as per the picture below. Unscrew the bolt located on the inside rear of the vehicle on the floor anticlockwise.

Be careful when as the tyre can heave and drop when released.



Always make sure the spare tyre is securely fastened before driving.

