

# Attaching snow chains to your vehicle

**JUCY**

1



Hold chains up and remove any twists so they hang freely. Ensure the black band is on the bottom hoop with the open end facing the wheel.

2



Place chains on the ground facing the wheel. Slide chains around behind the wheel.

3



Locate the hook and chain at the end of the chain loops. These are marked with multi-coloured washers.

4



Lift the hook and chain around the wheel and connect together at the top rear of the tyre.

5




Start rolling both plastic hoops anticlockwise around the wheel. Rotate both plastic hoops together at the same time.

6




Keep rotating both plastic hoops around the wheel until the black band sits at the top front of the tyre.

7

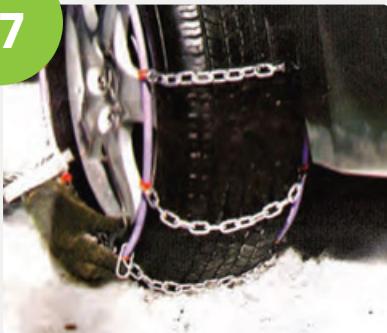

Shuffle the chains around the tyre so they sit squarely on the tyre and then tighten the chains around the wheel. Adjust the inside hook first then the front lever.

8

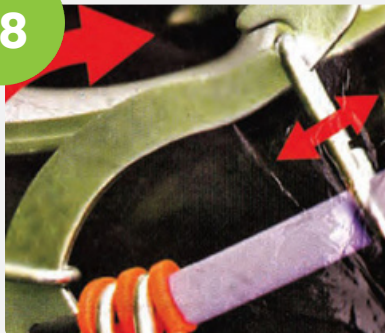

Tighten the ratchet and cam lever, once the chains are tight, secure the lever under the side loop along with any excess chain. Move vehicle forward 10m and re-tighten the chains until very tight.

## Important Information

RECOMMENDED MAX SPEED **30 KM/H**  
DO NOT EXCEED **50 KM/H**

CHAINS MUST BE FITTED **TIGHTLY**

ACCELERATE AND  
DECELERATE **SLOWLY**

ONLY FIT CHAINS WHEN THERE IS  
**SNOW COVERING THE ROAD OR**  
**WHEN INSTRUCTED**

FIT CHAINS TO THE **DRIVING WHEELS**



For support, visit our website:  
[support.jucy.com](mailto:support.jucy.com)

[helphub.jucy.com](https://helphub.jucy.com)

[jucy.com](https://jucy.com)